



**WENZHOU RUNXIN MANUFACTURING MACHINE CO.,LTD**

ADD: NO.169, RUNXIN ROAD, SHANFU TOWN, WENZHOU, ZHEJIANG, CHINA.  
TEL.:0086-577-88630038, 88576512, 85956057 FAX:0086-577-88633258  
E-MAIL: sales@run-xin.com <http://www.run-xin.com>

Rev.A. 2403



## Multi-functional Flow Control Valve for Water Treatment Systems

63510 (Old Model:N74A1)  
63610 (Old Model:N74A3)  
63510B (Old Model:N74B1)  
63610B (Old Model:N74B3)

## User Manual



Please read this manual in details  
before using the valve and keep it properly  
in order to consult in the future.

0WRX.466.510

MODEL:N74A1-63510/N74A3-63610/N74B1-63510B/N74B3-63610B

Before the valve put into use, please fill in the below content so as to help us to refer in the future.

**Softener System Configuration**

Tank Size: Dia. \_\_\_\_\_mm, Height\_\_\_\_\_mm;

Resin Volume \_\_\_\_\_L; Brine Tank Capacity\_\_\_\_\_L;

Hardness of Raw Water\_\_\_\_\_mmol/L;

Pressure of Inlet Water\_\_\_\_\_MPa;

Control Valve Model\_\_\_\_\_ ; Number\_\_\_\_\_ ;

The Specification of Drain Line Flow Control\_\_\_\_\_;

Injector No.\_\_\_\_\_.

Water Source: Ground-water Filtered Ground-water  Tap Water Other\_\_\_\_\_.

**Parameter Set**

Parameter	Unit	Factory Default	Actual Value
Control Mode A-01 (02, 03, 04)	/	A-01	
Water Treatment Capacity(Meter Type)	m <sup>3</sup>	80.0	
Service Days (Time Clock Type by Days)	D.	03	
Service Hours (Time Clock Type by Hours)	H.	20	
Regeneration Time	/	02 : 00	
Backwash Time	min.	10	
Brine & Slow Rinse Time	min.	60	
Brine Refill Time	min.	05	
Fast Rinse Time	min.	10	
Maximum Interval Regeneration Days	D.	30	
Output Mode b-01(02)	/	b-01	

If there is no special requirement when product purchase, we choose 3# drain line flow control and 3# injector.

## Catalogue

Notice.....	3
1. Product Overview.....	4
1.1. Main Application & Applicability.....	4
1.2. Product Characteristics.....	4
1.3. Service Condition.....	6
1.4. Product Structure and Technical Parameters.....	7
1.5. Installation.....	8
2. Basic Setting & Usage.....	11
2.1. The Function of PC Board.....	11
2.2. Basic Setting & Usage.....	13
3. Applications.....	16
3.1. Softener Flow Chart.....	16
3.2. The Function and Connection of PC Board.....	18
A. Signal Output Connector.....	19
B. Interlock.....	22
C. Pressure Relief Output.....	22
D. Remote Handling Connector.....	23
E. Interlock System.....	23
F. Series System.....	23
3.3. System Configuration and Flow Rate Curve.....	24
3.4. Parameter Settlement.....	26
3.5. Parameter Enquiry and Setting.....	27
3.6. Trial Running.....	31
3.7. Trouble-Shooting.....	32
3.8. Assembly & Parts.....	35
4. Warranty Card.....	40

## Notice

### Notice

- To ensure normal operation of the valve, please consult with professional installation or repairing personnel before use it.
- If there are any of pipeline engineering and electric works, there must be finished by professional at the time of installation.
- Do not use the control valve with the water that is unsafe or unknown quality.
- Depending on the changing of working environment and water requirement, each parameter of softener should be adjusted accordingly.
- When the water treatment capacity is too low, please check the resin. If the reason is shortage of resin, please add; if the resin is turn to reddish brown or broken, please replace.
- Test water periodically to verify that system is performing satisfactorily.
- Sodium used in the water softening process should be considered as part your overall dietary salt intake. Contact doctor if you are on a low sodium diet.
- Ensure that there is solid salt all the time in the brine tank in the course of using, when this valve is used for softening. The brine tank should be added the crystalline coarse salt only, at least 99.5% pure, forbidding use the small salt.
- Do not put the valve near the hot resource, high humidity, corrosive, intense magnetic field or intense vibrations environment. And do not leave it outside.
- Forbidden to carry the injector body. Avoid using injector body as support to carry the system.
- Forbidden to use the brine tube or other connectors as support to carry the system.
- Please use this product under the water temperature between 5~45℃, water pressure 0.2~0.6 MPa. Failure to use this product under such conditions voids the warranty.
- If the water pressure exceeds 0.6 Mpa, a pressure reducing valve must be installed in front of the water inlet. While, if the water pressure under 0.2 MPa, a booster pump must be installed in front of the water inlet.
- Do not let children touch or play, because careless operation may cause the procedure changed.
- When the attached cables or transformer of this product are broken, they must be changed to the one that is from our factory.
- Advice to use M88x2 male thread distributor for top-mounted valve to make convenience for disassembly.
- At the end of the product lifetime, parts and components of the product are sorted and properly disposed in accordance with local laws and regulations.

# 1. Product Overview

## 1.1. Main Application & Applicability

Used for softening or demineralization water treatment systems.

Be suitable for residential softening system.

Ion exchange equipment

Boiler softening water system

RO pretreatment softening system, etc.

## 1.2. Product Characteristics

### ● Simple structure and reliable sealing

It adopts hermetic head faces with high degree pottery and corrosion resistance for opening and closing. It combines with Service, Backwash, Brine & Slow Rinse, Brine Refill and Fast Rinse.

### ● Variety of installation methods

Use side-mounted connector can change N74B from top mounted to side mounted, and screen is movable.

### ● No water passes the valve in regeneration in single tank type.

### ● Manual function

Realize regeneration immediately by pressing “” at any time.



### ● Long outage indicator

If outage overrides 3 days, the time of day indicator “12:12” will flash to remind people to reset new time of day. The other parameters do not need to reset. The process will continue to work after power on.

### ● LED dynamic screen display

The stripe on dynamic screen flash, which indicates the control valve is in service, otherwise, it is in regeneration cycle.

### ● Buttons lock

No operations to buttons within 1 minute, button lock indicator lights on which represents buttons are locked. Before operation, press and hold the “” and “” buttons for 5 seconds to unlock. This function can avoid incorrect operation.

### ● It can choose time clock type or meter type by program selection.

Can realize interchange between time clock type by day or by hour and meter type by dialing a switch on main control board. (Check figure on P18) (Attention: After dialing the switch, it needs to reconnect the power. The meter type product has one flow meter and flow meter cable, but the time clock type product doesn't have.)

### ● Four kinds of meter type can be selected (Suit for N74A3, N74B3)


Mode	Name	Instruction
A-01	Meter delayed regeneration	Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration starts at the regeneration time.
A-02	Meter immediate regeneration	Regenerate immediately when the available volume of treated water drops to zero(0).
A-03	Intelligent meter delayed regeneration	Meter delayed regeneration type, but by setting resin volume, feed water hardness, regeneration factor, the controller will calculate the system capacity.
A-04	Intelligent meter immediate regeneration	Meter immediate regeneration type, but by setting resin volume, feed water hardness, regeneration factor, the controller will calculate the system capacity.

### ● Interlock Function

It has a function of interlock to realize only one valve in regeneration but the other valves are in service while several valves parallel in system. In multi-steps treatment systems such as RO pre-treatment, when several valves are in series, there is only one valve in regeneration or washing to ensure pass water all the times while different valves in regeneration or washing. (Application refers to Figure 3-9)

### ● Signal output

There is a signal output connector on main control board. It is applied for controlling external wiring (Refer to Figure from Figure 3-1 to Figure 3-8). There are two kinds of output modes. b-01 Mode: Turn on when start regeneration and shut off at the end of regeneration; b-02 Mode: Signal is available only at intervals of each status. Refer to below figure:

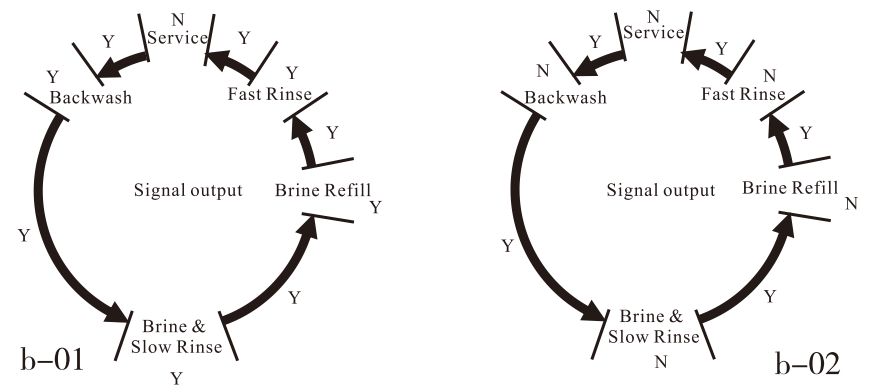

● Remote handling connector

This connector can receive external signal, used together with PLC, and computer etc. to control the valve remotely. (Application refers to Figure3-11)

● Pressure relief connector

The valve will cut off feeding water to drain line when it switches in regeneration cycles (Same as signal output b-02). Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. (Application refers to Figure3-10)

● Maximum interval regeneration days

Under the situation of service reaching the setting days and the volume not yet, it could enter into regeneration process forcibly when current time is the same as regeneration time.

● All parameters can be modified

According to the water quality and usage, the parameters in the process can be adjusted.

1.3. Service Condition

Runxin valve should be used under the below conditions:

Items		Requirement
Working conditions	Water pressure	0.2MPa ~ 0.6MPa
	Water temperature	5℃ ~ 45℃
Working environment	Environment temperature	5℃ ~ 45℃
	Relative humidity	≤95% ( 25℃ )
	Electrical facility	AC100 ~ 240V/50 ~ 60Hz
Inlet water quality	Water turbidity	< 5FTU
	Water hardness	First Grade Na <sup>+</sup> < 6.5mmol/L; Second Grade Na <sup>+</sup> < 10mmol/L
	Free chlorine	< 0.1mg/L
	Iron2 <sup>+</sup>	< 0.3mg/L
	CODMn	< 2mg/L ( O <sub>2</sub> )


In the above table, First Grade Na<sup>+</sup> represents First Grade Na<sup>+</sup> Exchanger. Second Grade Na<sup>+</sup> represents Second Grade Na<sup>+</sup> Exchanger.

● When the water turbidity exceeds the conditions, a filter should be installed on the inlet of control valve.


● When the water hardness exceeds the conditions, the outlet water hardness will hardly-reach the requirement of boiler feed water ( 0.03 mmol/L ) . It is suggested to adopt second grade softener.

1.4. Product dimension and parameter


A. Product dimension (The appearance is just for reference. It is subject to the real product.)

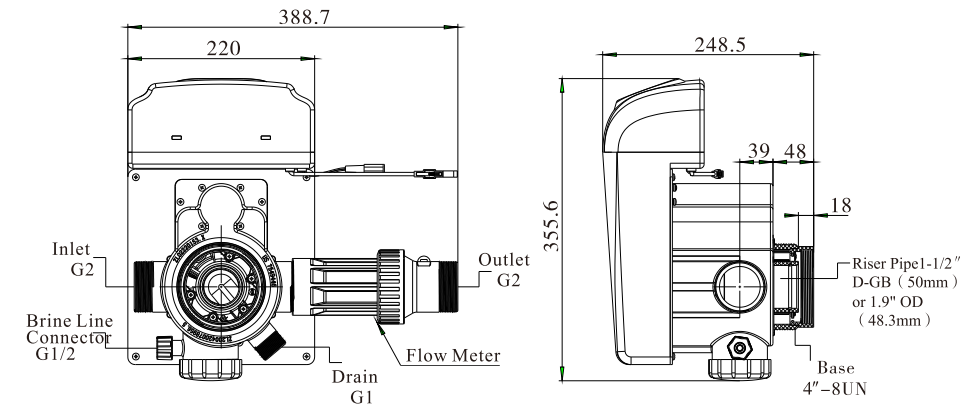

Structure Chart of N74A3 ( 63610 )

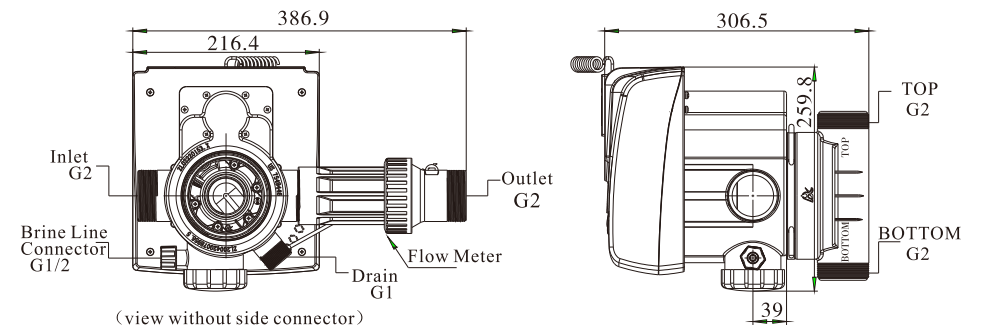

(view without side connector)

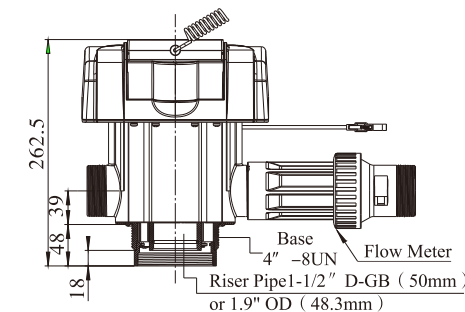

(view without side connector)

Structure Chart of N74B3 ( 63610B )

B. Technical Parameters

Model	Transformer Output	Flow Rate m <sup>3</sup> /h @0.3MPa	Regeneration Type	Installation Type
N74A1 (63510)	DC24V, 1.5A	10	Time clock type by days	Top-mounted
N74A3 (63610)			Meter type	
N74B1 (63510B)	DC24V, 1.5A	10	Time clock type by days	Top-mounted or side-mounted
N74B3 (63610B)			Meter type	

1.5. Installation

A. Installation notice

Before installation, read all those instructions completely. Then obtain all materials and tools needed for installation.

The installation of product, pipes and circuits, should be accomplished by professional to ensure the product can operate normally.

Perform installation according to the relative pipeline regulations and the specification of Water Inlet, Water Outlet, Drain Outlet, Brine Line Connector.

B. Device location

- ①The softener should be located close to drain.
- ②Ensure the unit is installed in enough space for operating and maintenance.
- ③Brine tank need to be close to softener.
- ④The unit should be kept away from the heater, and not be exposed outdoor. Sunshine or rain will cause the system damage.
- ⑤Please avoid installing the system in one acid/alkaline, magnetic or strong vibration circumstance, because above factors will cause the system disorder.
- ⑥Do not install the filter or softener, drain pipeline in circumstance which temperature may drop below 5°C, or above 45°C.
- ⑦Install the system in the place where with the minimum loss in case of water leaking.

C. Pipeline installation (Take N74A3 as an example)

①Install control valve

a. As the Figure 1-1 shows, select the riser pipe with 50mmOD, take GB standard riser pipe as an example glue the riser pipe to the bottom strainer and put it into the mineral tank, cut off the exceeding tube out of tank top opening and round it. Plug the riser tube in case of mineral entering.

b. Fill the resin to the tank, and the height is accordance with the design code.

c. Screw top strainer connector to valve body with five pieces of screws.

- d. Insert the top strainer to the valve
- e. Insert the riser tube into control valve and screw tight control valve.

Note:

- The length of riser tube should be neither higher 2mm nor lower 5mm tank top opening height, and its top end should be rounded to avoid damage of O-ring inside the valve.
- Avoid filling floccules substance together with resin to the mineral tank.
- Avoid O-ring inside control valve falling out while rotating it on the tank.

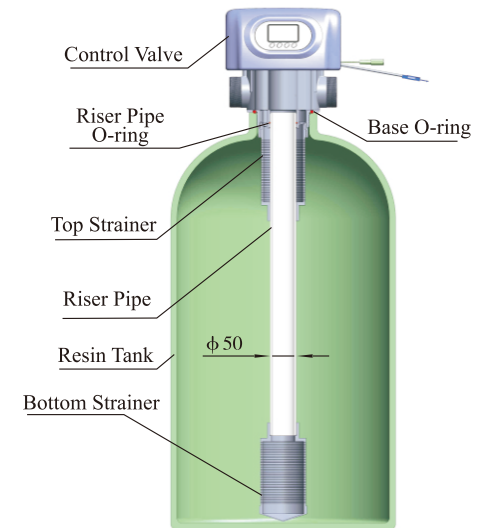


Figure 1-1

②Install flow meter

As Figure1-2 shows, put the sealing ring into nut of flow meter, screw in water outlet; insert the sensor into flow meter.

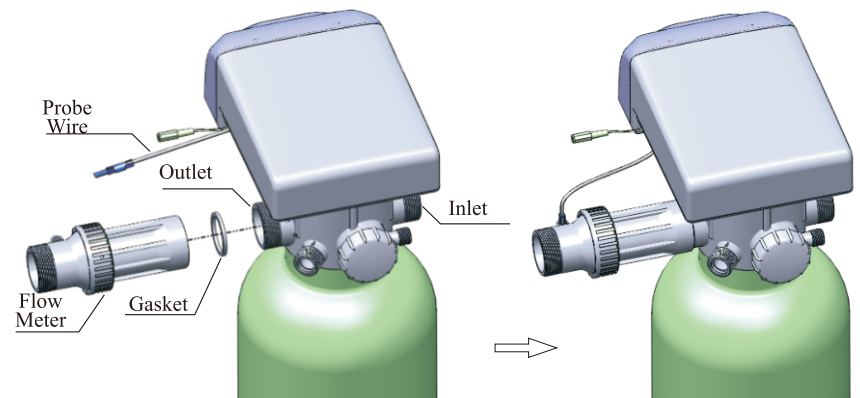


Figure1-2

③Pipeline connection

a. As Figure 1-3 shows, install a pressure gauge in water inlet.

b. Install valve A, B, C, D in inlet, outlet, inlet pipeline and outlet pipeline. Valve D is sampling valve.

c. Install a check valve on outlet pipe.

d. Inlet pipeline should be in parallel with outlet pipeline. Support inlet and outlet pipeline with fixed holder.

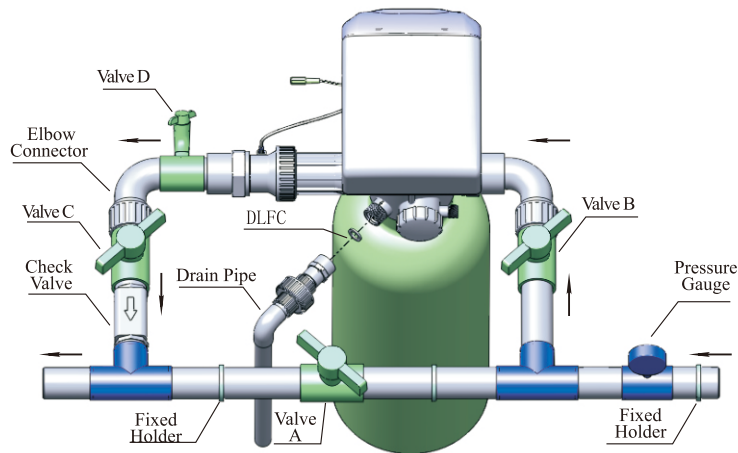


Figure1-3

**Note:**

- If the water outlet or water tank is installed higher than control valve or is used in parallel interlock system with multi-outlets, a liquid level controller must be installed in brine tank or a check valve must be installed on outlet. Or else, the water in water outlet or water tank will flow backwards into brine tank when backwash.
- If making a soldered copper installation do all sweat soldering before connecting pipes to the valve. Torch heat will damage plastic parts.
- When turning threaded pipe fittings onto plastic fitting, use care not to cross thread or broken valve.
- If the valve belongs to time clock type (N74A1 or N74B1), there are no step ②.

④ Install drain pipeline

Insert drain line flow control into drain outlet and connect the drain outlet with the animated nut, as Figure 1-3 shows.

**Note:**

- Control valve should be higher than drain outlet, and be better not far from the drain outlet.
- Be sure not connect drain with sewer directly, and leave a certain space between them, to avoid wastewater being absorbed to the water treatment equipment, such as showed in the Figure1-4.



Figure 1-4

⑤ Connect brine tube

- a. As Figure1-5 shows, slide G1/2" brine tube hose connector over end of brine tube.
- b. Insert tube bushing into the end of brine tube.
- c. Tighten brine draw hose connector into brine line connector.
- d. Connect the other end of brine tube with the brine tank. (The liquid level controller and air-blocker should be installed in the brine tank.)


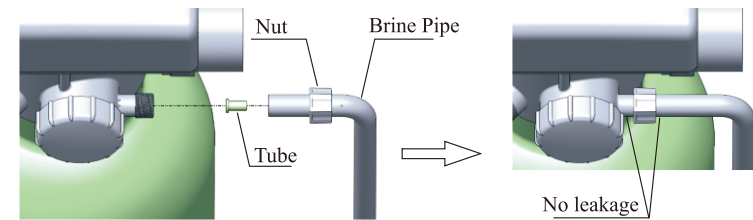


Figure1-5

Remark: The brine tube and drain pipeline should not be bended or plugged.

## 2. Basic Setting & Usage

### 2.1 The Function of PC Board

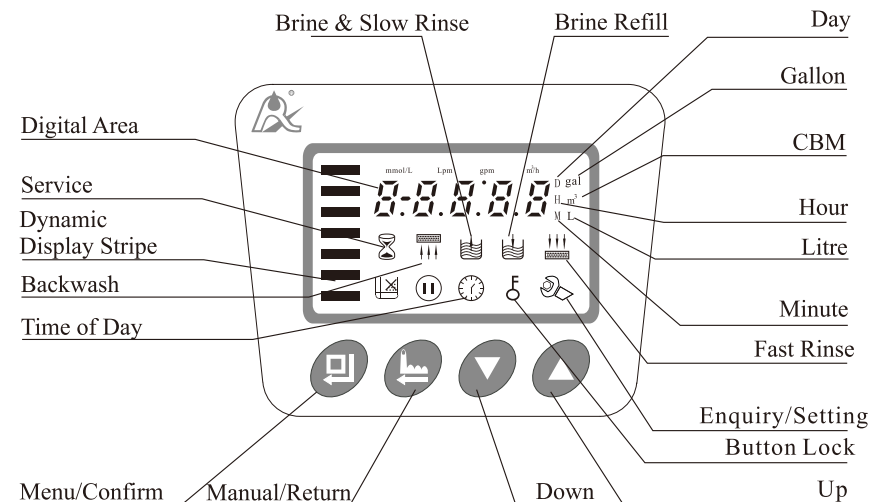

A. Time of day indicator

Lights on, display the time of day.

B. Button lock indicator

● Lights on, indicates the buttons are locked. At this moment, press any single button will not work (No operation in one minute, will light on and lock the buttons.)

● Solution: Press and hold both and for 5 seconds until the lights off.

C. Program mode indicator

● Lights on, enter program display mode. Press or to view all values.

● Flashes enter program set mode. Press or to adjust values.

D. Menu/Confirm button

● Press , lights on, enter program display mode and press or to view all values.

● In program display mode, press , flashes, enter program set mode, press or to adjust values.

● Press after all program are set, and then the voice “DI” means all setting are success and return program display mode.

E. Manual/Return button

● Press in any status, it can proceed to next step. (Example: if the outlet water is unqualified, press in Service status, it will start regeneration cycles instantly; Press while it is in Backwash status, it will end backwash and go to Brine & Slow Rinse at once.)

● Press in program display mode, and it will return in Service; Press in program set mode, and it will return program display mode.

● Press while adjusting the value, then it will return program display mode directly without saving value.

F. Up and Down

● In program display mode, press or to view all values.

● In program set mode, press or to adjust values.

● Press and hold both and for 5 seconds to unlock the Button Lock status.

2.2. Basic Setting & Usage

A. Parameter specification

Function	Indicator	Factory Default	Parameter Set Range	Instruction
Time of Day		Random	00: 00 ~ 23:59	Set the time of day when use; “:” flashes.
Control Mode	A-01	A-01	A-01	Meter Delayed: Regenerate on the day although the available volume of treated water drops to zero (0). Regeneration starts at the regeneration time.
			A-02	Meter Immediate: Regenerate immediately when the available volume of treated water drops to zero (0).
			A-03	Intelligent Meter Delayed: Meter Delayed Regeneration type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity.
			A-04	Intelligent Meter Immediate: Meter Immediately Regeneration Type, but by setting Resin Volume, Feed Water Hardness, Regeneration Factor, the controller will calculate the System Capacity.
Service Day		1-03D.	0~99 days	Only for Time Clock Type, regeneration by days
Service Hour		1-20H.	0~99 hours	Only for Time Clock Type, regeneration by hours
Regeneration Time	02:00	02:00	00: 00 ~ 23:59	Regeneration time; “:” lights on
Resin Volume	50L	50L	20 ~ 500L	Resin volume in resin tank (L)
Feed Water Hardness	Yd1.2	1.2	0.1 ~ 9.9	Feed water hardness (mmol/L)
Exchange Factor	AL.65	0.65	0.30 ~ 0.99	Relate to the raw water hardness. When hardness is higher, the factor is smaller.
Water Treatment Capacity		80m <sup>3</sup>	0 ~ 999.9m <sup>3</sup>	Water treatment capacity in one circle (m <sup>3</sup> )
Backwash Time		10min.	0 ~ 99	Backwash time (Minute)
Brine & Slow Rinse Time		60min.	0 ~ 99	Brine & Slow rinse time (Minute)
Brine Refill Time		5min.	0 ~ 99	Brine refill time (Minute)



Fast Rinse Time		10min.	0 ~ 99	Fast rinse time (Minute)
Maximum Interval Regeneration Days	H-30	30	0 ~ 40	Regenerate on the day even although the available volume of treated water does not drop to zero (0).
Output Control Mode	b-01	01	01 or 02	b-01: Signal will turn on during the regeneration (Refer to P5). b-02: Signal is only available at intervals of regeneration cycles and in service. (Refer to P5).

B. Process Display



Figure A



Figure B




Figure C




Figure D




Figure E




Figure F




Figure G




Figure H




Figure I

Illustration:

● In Service status, the figure shows A/B/C/D; In Backwash status, it shows figure E/I; In Brine& Slow Rinse status, it shows F/I; In Brine Refill status, it shows figure G/I; In Fast Rinse status, it shows figure H/I. In each status, every figure shows 15 seconds.

● Above displays are taking the Meter Type for example. For the Time Clock Type, it shows the rest days or hours, such as 1-03D or 1-10H.

● The display screen will only show “-00-” when the electrical motor is running.

● The time of day figure “” flashes continuously, such as “12:12” flashes, indicates long outage of power. It reminds to reset the time of day.

● The display will show the error code, such as “-E1-” when the system is in error.

● Working process: Service→ Backwash→ Brine & Slow Rinse→ Brine Refill→ Fast Rinse→Service.

C. Usage

After being accomplished installation, parameter setting and trial running, the valve could be put into use. In order to ensure the quality of outlet water can reach the requirement, the user should complete the below works:

①Ensure that there is solid salt all the time in the brine tank in the course of using when this valve is used for softening. The brine tank should be added the crystalline coarse salt only, at least 99.5% pure, forbidding use the small salt and iodized salt.

②Test the outlet water and raw water hardness at regular time. When the outlet water hardness is unqualified, please press the after unlock the buttons and the valve will temporarily regenerate again (It will not affect the original set operation cycle.)

③When the feed water hardness changes a lot, you can adjust the water treatment capacity as follow:

Press and hold both and for 5 seconds to unlock the buttons. Press , and the lights on, then press , screen will show A-01 or A-02, then press three times, and the digital area will show the given water treatment capacity ( If the control mode shows A-03 or A-04, then press four times, the digital area will show the raw water hardness); Press again, and digital number flash, press or continuously to reset the capacity value (Or water hardness). Press and hear a sound “Di” then finish the adjustment. Press exit and turn back the service status.


The estimation of water treatment capacity value, you can refer to the professional application specification. When select A-03 or A-04 intelligent control mode, the control will automatically calculate the water treatment capacity by setting resin volume, raw water hardness and regeneration factor.

④For A-01 or A-03 control mode (Regeneration delayed type), please pay attention to whether it is current time or not. If the time is not right, you can adjust as follow: After unlock the buttons, press , the and light on. Then press , the and hour value flash, press or continuously to reset the hour value; Press again, and minute value flash, press or continuously to reset the minute value; Press and hear a sound “Di”, then finish the adjustment. Press exit and turn back the service status.

The regeneration parameters have been set when control valve left factory. Generally, it does not need to reset. If you want enquiry and modify the setting, you can refer to the professional application specification.


### 3. Applications

#### 3.1. Softener Flow Chart

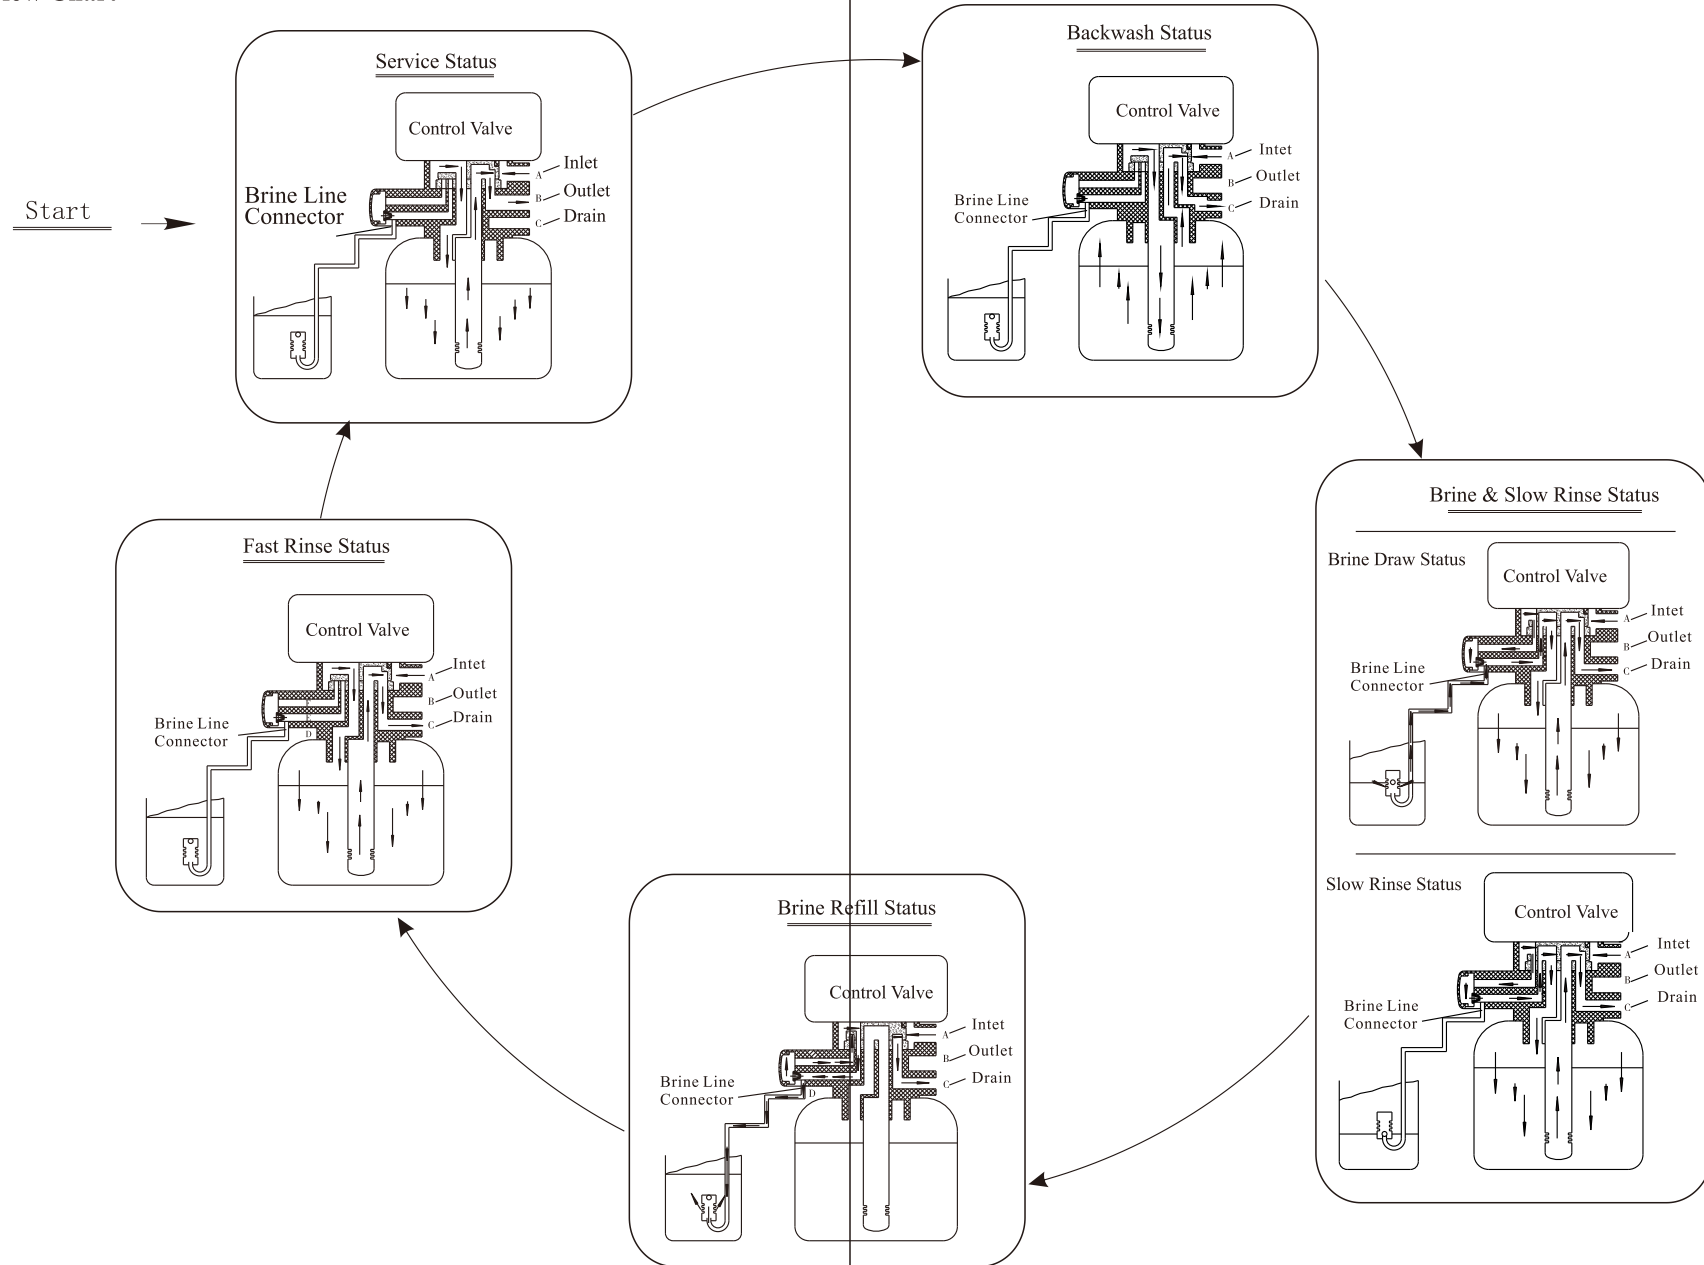

### 3.2. The Function and Connection of PC Board

Open the front cover of control valve, you will see the main control board and connection port as below:

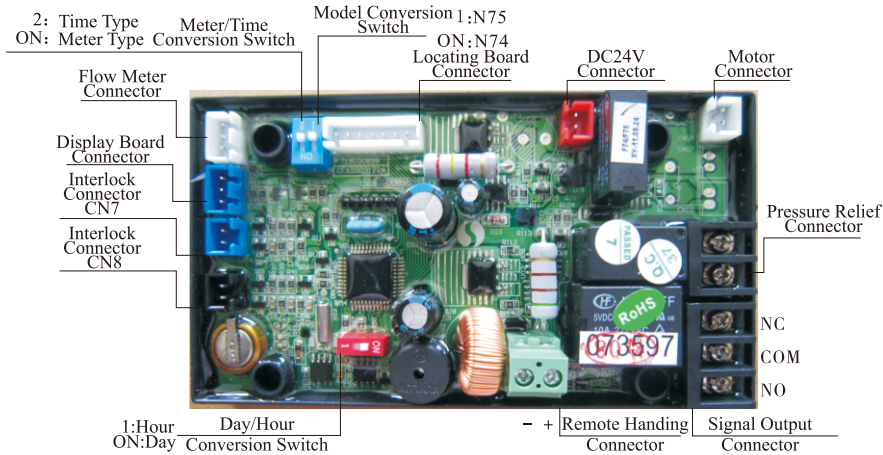

The main functions on main control board:

Function	Application	Explanation
Signal output connector b-01	Outlet solenoid valve	Used in strict requirements regarding no hard water flowing from outlet or controlling the liquid level in water tank.
	Inlet pump	Increase pressure for regeneration or washing. Use the liquid level controller to control inlet pump to ensure there is water in tank.
Signal output connector b-02	Inlet solenoid valve or inlet pump	When inlet pressure is high, it needs to close water inlet to protect motor when valve is rotating.
Pressure relief connector	Control the inlet bypass to release pressure	When valve is rotating, pressure relief connector is opened to prevent pressure increasing rapidly.
Interlock connector	To ensure only one control valve regenerate or wash in system.	Use in RO Pre-treatment, water supply together but regeneration in turn. Second grade ion exchange equipment, etc.
Remote handling connector	Receipt signal to make the control valve rotate to next status.	It is used for on-line inspection system, connected with PC to realize automatically or remote controlling valve.

### A. Signal Output Connector

1) Control Outlet Solenoid Valve (Set b-01)

① Solenoid valve on outlet controls water level in water tank.

**Instruction:** If system strictly requires no hard water flowing from outlet in regeneration cycle ( Mainly for no hard water flows out when valve is switching or valve in backwash or brine drawing positions), a solenoid valve could be installed on outlet, the wiring refers to Figure 3-1:

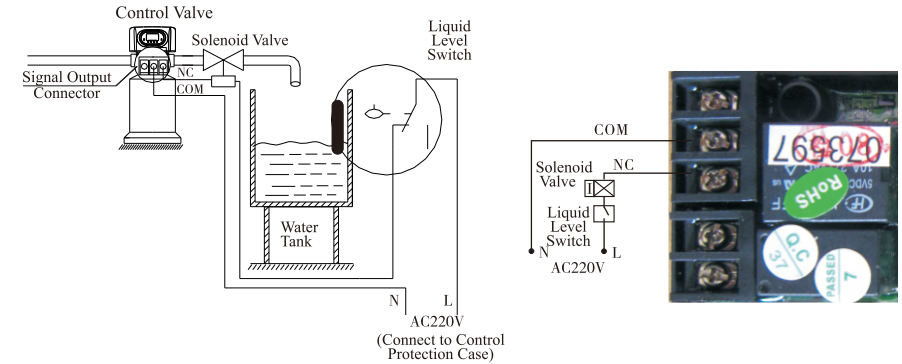


Figure3-1 Wiring of Solenoid Valve on Outlet

Function:

When valve is in service status, if soft water tank is short of water, solenoid valve will open to supply soft water, but if water tank has enough water, solenoid valve will close, so no soft water is supplied to the tank.

When the valve is in backwash status, there is no signal output. So, solenoid valve is closed, and no raw water flows into soft water tank.

② Control Inlet Solenoid Valve( Set b-02)

**Instruction:** When inlet pressure exceeds 0.6MPa, install a solenoid valve on inlet. Control mode is b-02. Pressure is relieved when valve switching, the wiring refer to Figure 3-2. As Figure 3-3 shows, it also can use the pressure relief port to work.

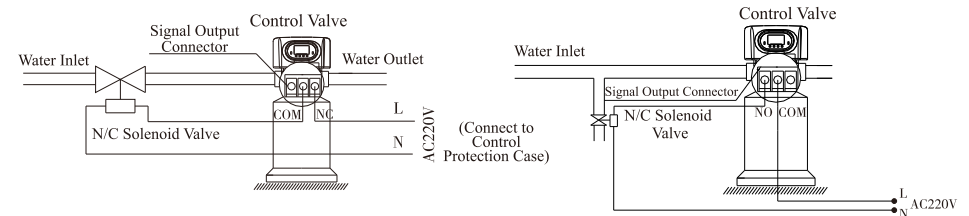


Figure 3-2 Wiring of Solenoid Valve on Inlet

Figure3-3 Wiring of Pressure Relief Port

MODEL:N74A1-63510/N74A3-63610/N74B1-63510B/N74B3-63610B

Function:

When inlet pressure is high, install a solenoid valve on inlet to ensure valve switches properly. The solenoid valve will open when valve is exactly at status of Service, Backwash, Brine Draw & Slow Rinse, Brine Refill and Fast Rinse. When valve is switching, solenoid valve is closed, no water flows into valve to ensure valve switching properly. It could prevent the problem of mixing water and water hammer.

Use interlock cable to realize valves in parallel and series in same system which is suited for RO pretreatment system or second grade Na<sup>+</sup> system. The Wiring refers to Figure 3-4:

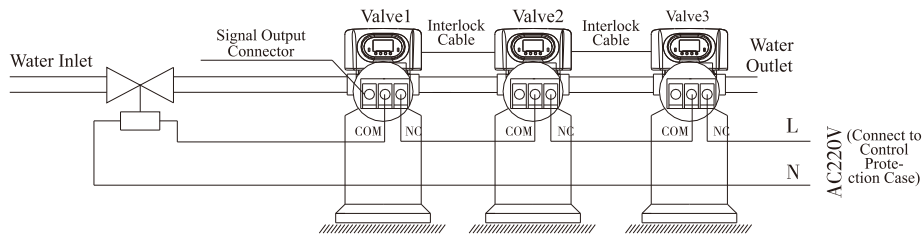


Figure 3-4 Wiring of Solenoid Valve in Inlet

2) Liquid Level Controller Controls Inlet Pump (Two-phase motor) (Set b-01)

**Instruction:** For the system using underground water or middle-tank supplying water, users can turn on and turn off the pump by operating the switch of liquid level controller and control valve. The wiring refers to Figure 3-5:

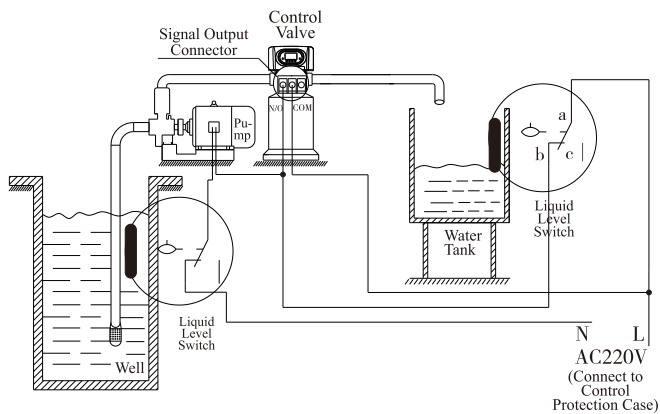


Figure 3-5 Wiring of Liquid Level Controller Controlling Inlet Pump

MODEL:N74A1-63510/N74A3-63610/N74B1-63510B/N74B3-63610B

Function:

When valve is in service status, if water tank is short of water, pump starts working, but if water tank has enough water, the switch of liquid level controller is closed, so pump doesn't work.

When valve in regeneration cycle, inlet always has water no matter what is water condition in water tank. As Runxin valve no water pass outlet in regeneration cycle, it ensure no water fill into brine tank. A liquid switch at the top opening of well or in middle water tank in RO system protect pump from working without water in case of out of raw water.

3) Liquid Level Switch in Water Tank Controls Inlet pump (Three-phase. Figure 3-6) (Set b-01)

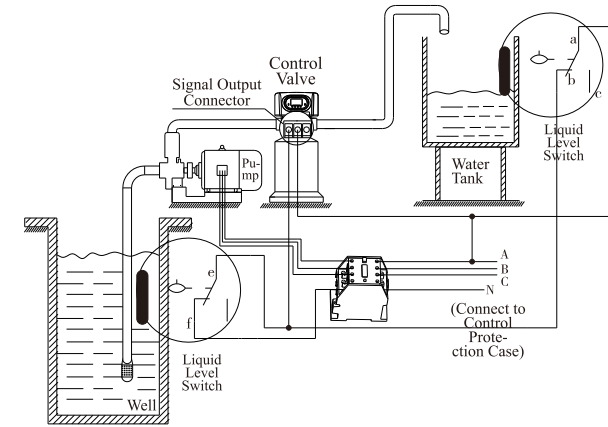


Figure3-6Wiring of Liquid Level Switch in Water Tank Controls 380V Inlet Pump

4) Control Inlet Booster Pump( Set b-01 or b-02)

**Instruction:** If inlet water pressure is less than 0.2MPa, which makes backwash or brine drawing difficult, a booster pump is suggested to be installed on inlet. Set Control mode as b-01. When system in regeneration cycle, booster pump opens, the wiring refers to Figure 3-7. If the booster pump current is bigger than 5A, system need to install an contactor, the wiring refers to Figure 3-8.

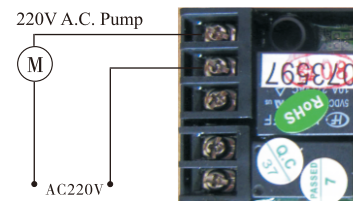


Figure 3-7Wiring of Booster Pump on Inlet

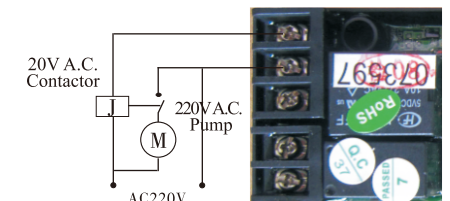


Figure 3-8 Wiring of Booster Pump on Inlet

### B. Interlock

Instruction:

In the parallel water treatment system, it ensures only one valve in regeneration or washing cycle and (n-1) valves in service, that is, realizing the function of supplying water simultaneously and regenerating individually.

In the series and parallel water treatment system (Second grade Na<sup>+</sup> Exchanger or RO pre-treatment system), it ensure only one valve in regeneration or washing cycle and there is/are water (s) in service. The wiring refers to Figure 3-9.

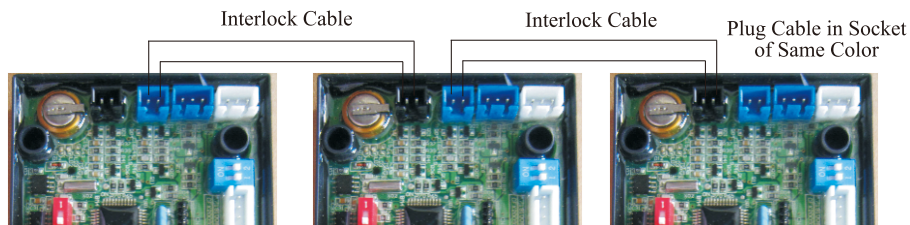


Figure 3-9 Network System Wiring with Interlock Cable

**Note:** Use Interlock Cable to connect CN8 to CN7 on next valve in the loop. One system with several valves, if interlock cable is disconnected, the system is divided into two individual system.

### C. Pressure Relief Connector

The valve will cut off feeding water to drain line when it switches in regeneration cycles. Thus in some water treatment system, e.g. Deep Well, one booster pump was installed on the inlet to increase the system water feeding pressure, this cut-off will cause pressure on inlet rising too fast to damage the valve. Pressure Relief Output can be used to avoid this problem. The wiring refers to Figure 3-10

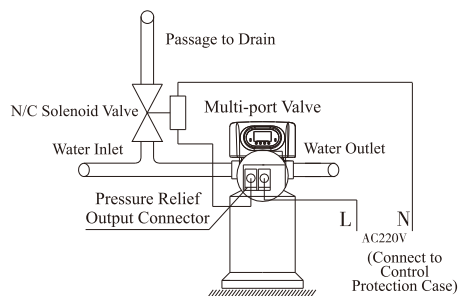


Figure 3-10 Wiring of Pressure Relief Output

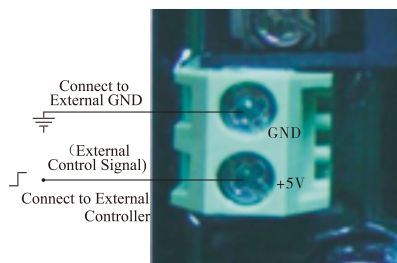


Figure 3-11 Wiring of Remote Input

### D. Remote Handling Connector

When the valve is used to make pure water or other system that can be monitored online or connected to a PC, etc., when the conductivity or other parameters reach the set value or the PC sends a signal and needs system regeneration, it can provide a signal to remote handling connector of main control board by the signal line, which can make the valve regenerate immediately. The connector receiving the signal is equivalent to pressing the manual button. The wiring refers to Figure 3-11.

### E. Interlock System

2 or more than 2 valves are interlocked connecting in one system and all valves are in service but regenerate individually. The wiring refers to Figure 3-12.

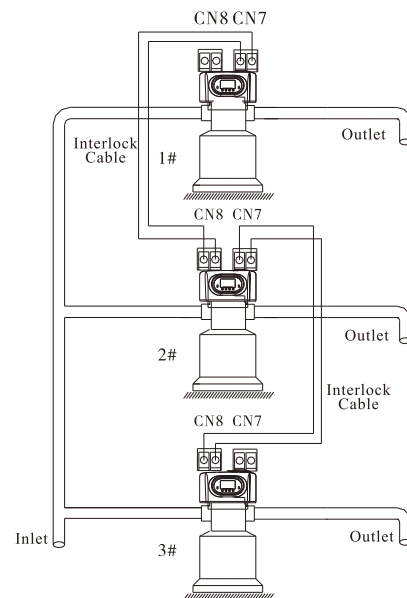


Figure 3-12 Interlock system

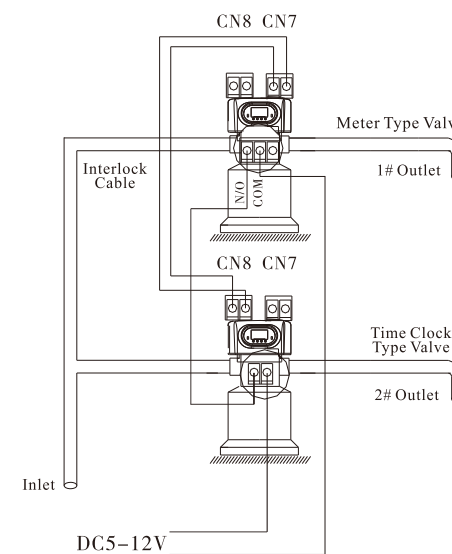


Figure 3-13 Series system

### F. Series System

This is a 2 or more than 2 valves system, all in service, with one flow meter for the entire system. For the time type valve, the regeneration time should be set and adjusted to the Max; for the meter type valve, connect its signal output connector with the remote handle connector of the time clock type valve. That can realize the function of supplying water simultaneously and regenerating orderly. The wiring refer to Figure 3-13:

3.3. System Configuration and Flow Rate Curve

A. Product Configuration


Product configuration with tank, resin volume, brine tank and injector

Tank Size (mm)	Resin Volume (L)	Flow Rate (t/h)	Brine Tank Size (mm)	The Minimum Salt Consumption for Regeneration (Kg)	Injector Model
φ 500 × 1800	200	5.0	φ 740 × 1275	30.00	7401
φ 600 × 1800	300	7.0	φ 740 × 1275	45.00	7403
φ 750 × 1800	450	11.0	φ 840 × 1335	67.50	7404

Attention: The flow rate calculation is based on linear velocity 25m/h; the minimum salt consumption for regeneration calculation is based on salt consumption 150g /L (Resin).

B. Flow Rate characteristic

1). Pressure-flow rate curve

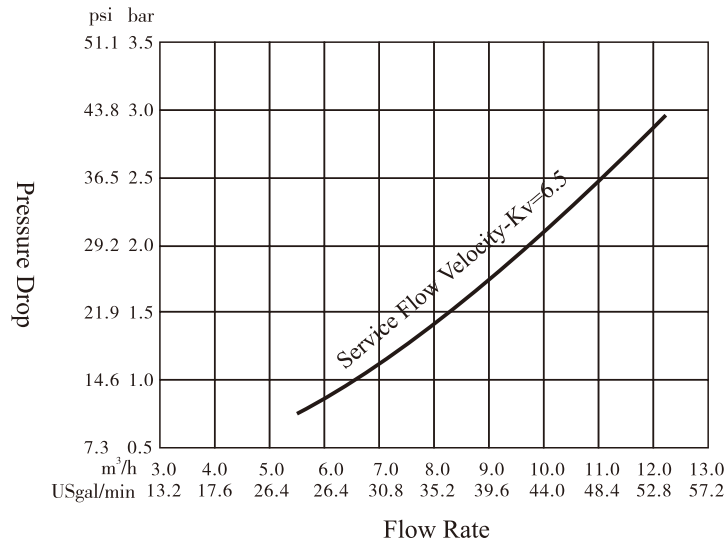

2) . Injector parameter table

Inlet Pressure Mpa	Total Flow Rate on Injector (L/M)			
	7401 Coffee	7402 Pink	7403 Yellow	7404 Blue
0.15	10.61	13.86	16.08	25.02
0.20	13.00	16.60	19.32	29.37
0.25	14.47	18.17	21.30	32.91
0.30	16.00	20.00	23.40	36.20
0.35	17.28	21.64	25.19	38.73
0.40	18.55	23.33	26.98	41.43

3) . Configuration for Standard Injector and Drain Line Flow Control

Tank Dia. mm	Injector Model	Injector Color	Total Flow Rate on Injector	Total Flow Rate on Injector	Total Flow Rate on Injector	DLFC	Flow Rate of Backwash and Fast rinse
			L/m	L/m	L/m		L/m
500	7401	Coffee	16.0	10.56	23	1#	46.3
550	7402	Pink	20.0	13.88	28.2	2#	67
600	7403	Yellow	23.4	15.75	32.9	3#	71
750	7404	Blue	36.2	24.17	50.5	4#	75

Remark: Above data for the product configuration and relevant characteristics are only for reference. When put in practice, please subject to the different requirements of raw water hardness and application.

3.4. Parameter settlement

①Service time T1

Water treatment capacity:

$$Q = V_R \times K \div Y_D \text{ (m}^3\text{)}$$

$V_R$  — Resin volume (m<sup>3</sup>)  
 $K$  — Exchange factor (mmol/L) 400~1000. Down-flow regeneration, take 400~750. Up-flow regeneration, take 450~1000. If the inlet water hardness is higher, the factor is smaller.  
 $Y_D$  — Hardness of inlet water (mmol/L)

By hours:  $T1 = Q \div Q_h$  (hour)

$Q_h$  — m<sup>3</sup>/h, Average water consumption per hour  
 $Q$  — m<sup>3</sup>, Water treatment capacity

By days:  $T1 = Q \div Q_d$  (day)

$Q_d$  — m<sup>3</sup>/d, Average water consumption per day  
 $Q$  — m<sup>3</sup>, Water treatment capacity

②Backwash time T2

It is subject to the turbidity of inlet water. Generally, It is suggested to be set 10~15 minutes. The higher the turbidity is, the longer backwash time can be set. However, if the turbidity is more than 5FTU, it should be better to install a filter in front of the exchanger.

③Brine & Slow rinse time T3

$$T3 = (40 \sim 50) \times H_R \text{ (min.)}$$

Generally,  $T3 = 45H_R$  (min.)

In this formula,  $H_R$  — The height of resin in exchange tank (m.)

④Brine refill time T4

Down-flow regeneration:  $T4 = 0.45 \times V_R \div \text{Brine refill speed}$  (min.)

Up-flow regeneration:  $T4 = 0.34 \times V_R \div \text{Brine refill speed}$  (min.)

In this formula,  $V_R$  — Resin volume (m<sup>3</sup>)

The Brine refill speed is related to inlet water pressure. It is suggested to lengthen 1~2 minutes of calculated brine refilling time to make sure there is enough water in tank. (The condition is that there is a brine valve installed in the brine tank)

⑤Fast rinse time T5

$$T5 = 12 \times H_R \text{ (min.)}$$

Generally, the water for fast rinse is 3~6 times of resin volume. It is suggested to be set 10~16 minutes, but it should be washed until the outlet water meets the requirements.

⑥Exchange factor

Exchange factor =  $E / (k \times 1000)$

In this formula,  $E$  — Resin working exchange capability (mol/m<sup>3</sup>) it is related to the quality of resin. Down-flow regeneration, take 800~900. Up-flow regeneration, take 900~1200.

$K$  — Security factor, often take 1.2~2. It is related to the hardness of inlet water: the higher the hardness is, the bigger the  $K$  is.

⑦Regeneration time:


The whole cycle for regeneration is about two hours. Please try to set up the regeneration time when you don't need to use water according to the actual situation.

The calculation of parameters for each step is only for reference, the actual proper time will be determined after adjusting by water exchanger supplier. This calculation procedure of softener is only for industrial application; it is not suitable for small softener in residential application.

3.5. Parameter Enquiry and Setting

(1) Parameter Enquiry

When  $\text{⏏}$  lights on, press and hold both  $\text{⬆}$  and  $\text{⬇}$  for 5 seconds to unlock buttons; then press  $\text{⏏}$ , and  $\text{⏏}$  lights on, enter to program display mode; press  $\text{⬆}$  or  $\text{⬇}$  to view each value according to below process. (Press  $\text{⏏}$  exit and turn back to service status)

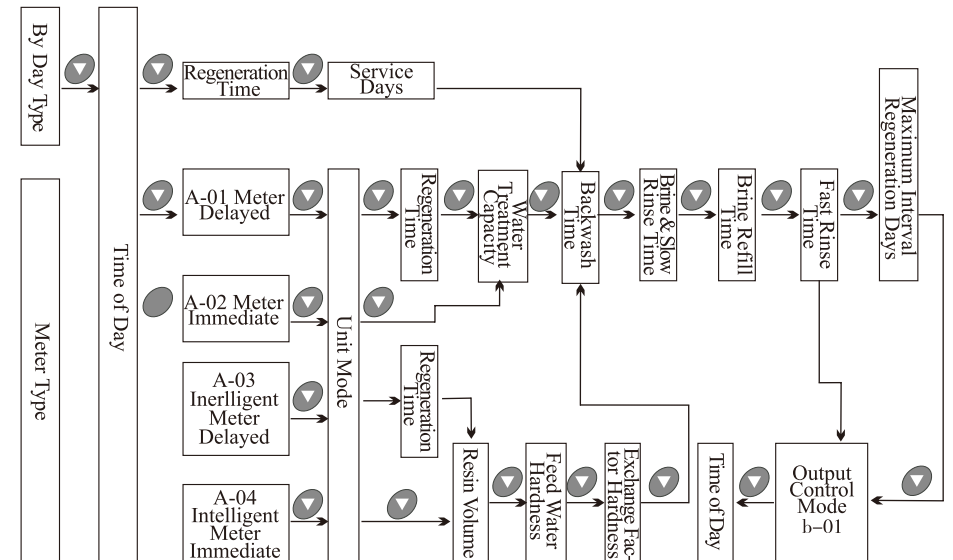

(2) Parameter Setting

In program display mode, press and enter into program set mode. Press or to adjust the value.

(3) The steps of parameter setting (Take N74A3 A-01 mode as an example)

Items	Process steps	Symbol
Time of Day	When time of day “12:12” continuously flashes, it reminds to reset; 1. Press  to enter into program display mode; both  and  symbol light on, “:” flashes; Press  enter into program set mode, both  and hour value flash, press  or  to adjust the hour value; 2. Press  again, both  and minute value flash, press  or  to adjust the minute value; 3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.	
Control Mode	1. In control mode display status, press  and enter into program set mode,  and 01 value flash; 2. Press  or , set the value to be A-01, A-02, A-03 or A-04 control mode; 3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.	
Regeneration Time	1. In regeneration time display status, press  to enter into program set mode, it shows “02:00”  and 02 flash; Press  or  to adjust the hour value; 2. Press  again,  and 00 flash, press  or  to adjust the minute value; 3. Press  then finish adjustment, press  to turn back.	
Water Treatment Capacity	1. In water treatment capacity display status, it shows  and 80.0. Press  and enter into program set mode.  and 80.0 flash; 2. Press  or  to adjust the water treatment capacity value (m <sup>3</sup> ); 3. Press  then finish adjustment, press  to turn back.	

Backwash Time	1. In backwash time display status, it shows  and 2-10. Press  and enter into program set mode.  and 10 flash; 2. Press  or  to adjust the backwash time (minute); 3. Press  then finish adjustment, press  to turn back.	
Brine & Slow Rinse Time	1. In brine & slow rinse time display status, it shows  and 3-60. Press  and enter into program set mode.  and 60 flash; 2. Press  or  to adjust the brine draw time (minute); 3. Press  then finish adjustment, press  to turn back.	
Brine Refill Time	1. In brine refill time display status, it shows  and 4-05, Press  and enter into program set mode.  and 05 flash; 2. Press  or  to modify the brine refill time (minute); 3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.	
Fast Rinse Time	1. In fast rinse time display status, it shows  and 5-10. Press  and enter into program set mode.  and 10 flash; 2. Press  or  to adjust the fast rinse time (minute); 3. Press  then finish adjustment, press  to turn back.	
Maximum Interval Regeneration Days	1. In maximum Interval regeneration days display status, it shows H-30. Press  and enter into program set mode.  and 30 flash; 2. Press  or  to adjust the Interval regeneration days; 3. Press  and hear a sound “Di”, then finish adjustment, press  to turn back.	



Signal Output Mode	<p>1. In signal output mode display status, it shows b-01. Press  and enter into program set mode.  and 01 flash;</p> <p>2. Press  or  to adjust the signal output mode (b-02);</p> <p>3. Press  then finish adjustment, press  to turn back.</p>	
--------------------	---	--

For example, the fast rinse time of a softener is 12 minutes. After regeneration, the chloridion in the outlet water is always higher than normal, indicating that there is not enough time for fast rinse. If you want the time to set to 15 minutes, the modification steps as follows:

- ① Press and hold both and to unlock the button ( lights off);
- ② Press , and lights on;
- ③ Press or continuously until lights on. Then the digital area shows: 5-12M;
- ④ Press , and 12 flash;
- ⑤ Press continuously until 12 is changed to 15;
- ⑥ Press , there is a sound “Di” and the figure stop flashing; the program back to enquiry status.
- ⑦ If you want to adjust other parameters, you can repeat the steps from ② to ⑤; If you don't, press and quit from the enquiry status, the display will show the current service status.

### 3.6. Trial Running

After installing the multi-functional flow control valve on the resin tank with the connected pipes, as well as setting up the relevant parameter, please conduct the trial running as follows:

- A. Close the inlet and outlet valve B & C, and open the bypass valve A. After cleaning the foreign materials in the pipe, close the bypass valve A. (As Figure1-3 shows)
- B. Add calculated water to the brine tank and adjust the air check valve. Then add solid salt to the tank and dissolve the salt as much as possible.
- C. Switch on power. Press and go in the Backwash position; when lights on, slowly open the inlet valve B to 1/4 position, making the water flows into the resin tank; you can hear the sound of air-out from the drain pipeline. After all air is out of pipeline, then open inlet valve B completely and clean the foreign materials in the resin tank until the outlet water is clean. It will take 8~10 minutes to finish the whole process.
- D. Press , turning the position from Backwash to Brine & Slow Rinse; lights on and enter in the process of Brine & Slow Rinse. The air check valve closes when control valve finish brine draw, then slow rinse starts to work. It is about 60~65 minutes for whole process.
- E. Press , turning the position from Brine& Slow Rinse to Brine Refill position. lights on and starts to brine refill until the brine tank is being refilled with water to the required level. It takes about 5~6 minutes, then add solid salt to the brine tank.
- F. Press , turning the positions from Brine Refill to Fast Rinse. lights on and start to fast rinse. After 10~15 minutes, take out some outlet water for testing: if the water hardness reach the requirement, and the chloridion in the water is almost the same compared with the inlet water, then go to the next step.
- G. Press , making the control valve return to Service Status; lights on and starts to running.

#### Note:

- When the control valve enters into the regeneration status, all programs can be finished automatically according to the setting time; if you want one of steps to be terminated earlier, you can press .
- If water inflows too fast, the media in tank will be damaged. When water inflow slowly, there is a sound of air emptying from drain pipeline.
- After changing resin, please empty air in the resin according to the above Step C.
- In the process of trial running, please check the water situation in all positions, ensuring there is no resin leakage.
- The time for Backwash, Brine& Slow Rinse, Brine Refill and Fast Rinse position can be set and executed according to the calculation in the formula or suggestions from the control valve suppliers.

**3.7. Trouble-Shooting**

**A. Control Valve Fault**

Problem	Cause	Correction
1. Softener fails to regenerate.	A. Electrical service to unit has been interrupted. B. Regeneration cycles set incorrect. C. Controller is defective. D. Motor fails to work.	A. Assure permanent electrical service (Check fuse, plug, pull chain or switch). B. Reset regeneration cycles. C. Check or Replace controller. D. Check or Replace motor.
2. Regeneration time is not correct.	A. Time of Day does not set correctly. B. Power failure more than 3 days, the time of day is incorrect.	A. Check and reset Time of Day. B. Reset Time of Day.
3. Softener supply hard water.	A. Bypass valve is open or leaking. B. No salt in brine tank. C. Injector is plugged. D. Insufficient water flows into brine tank. E. Leak at O-ring on riser pipe. F. Internal valve leaks. G. Incorrect regeneration time or raw water quality deterioration. H. Shortage of resin. I. Bad quality of feed water or turbine is blocked.	A. Close or repair bypass valve. B. Add salt to brine tank and maintain salt level above water level. C. Change or clean injector. D. Check Brine refill time. E. Make sure riser pipe is not cracked. F. Check or change valve body. G. Set correct regeneration time or water treatment capacity. H. Add resin to mineral tank and check whether resin leaks. I. Reduce the inlet turbidity, clean or replace turbine.
4. Softener fails to draw brine.	A. Inlet line pressure is too low. B. Brine line is plugged. C. Brine line is leaking. D. Injector is plugged or broken down. E. Internal control valve leaks. F. Drain line is plugged. G. Sizes of injector and DLFC are not matched with tank.	A. Increase inlet line pressure. B. Clean brine line. C. Replace brine line. D. Clean or replace new injector. E. Check or replace valve body. F. Clean drain line. G. Select correct injector size and DLFC according to the P25 requirements.
5. Unit used too much salt.	A. Improper salt setting. B. Excessive water in brine tank.	A. Check salt usage and salt setting. B. See problem no.6.

**Control Valve Fault**

6. Excessive water in brine tank.	A. Overlong refilling time. B. Remain too much water after brine draw. C. Foreign material in brine valve. D. Power outage when brining and system without liquid level controller. E. Brine refill is out of control.	A. Reset correct refilling time. B. Check the injector and make sure no stuff in the brine pipe. C. Clean brine valve and brine line. D. Stop water supplying and restart or install safety brine valve in salt tank. E. Repair or replace safety brine valve.
7. Pressure lost or rust in pipeline	A. Rust in the water supply pipe. B. Rust mass in the softener. C. Fouled resin bed. D. Too much rust in the raw water.	A. Clean the water supply pipe. B. Clean valve and add resin cleaning chemical, increase frequency of regeneration. C. Check backwash, brine draw and Brine refill. Increase frequency of regeneration and backwash time. D. Rust removal equipment is required to install before softening.
8. Loss of mineral through drain line.	A. Air in water system. B. Strainer is broken. C. Backwash flow rate is too high.	A. Exhaust air exist in system. B. Replace new strainer. C. Check for proper drain flow rate.
9. Control cycle continuously.	A. Locating signal wiring breaks down. B. Controller is faulty. C. Foreign material stuck the driving gear. D. Time of regeneration steps were set to zero.	A. Check and connect locating signal wiring. B. Replace controller. C. Take out foreign material. D. Check and reset program setting.
10. Drain flows continuously.	A. Internal valve leaks. B. Power off when valve is in backwash or fast rinse status.	A. Check and repair valve body or replace it. B. Adjust valve to service position or turn off bypass valve and restart after electricity supply is normal.
11. Interrupted or irregular brine.	A. Water pressure is too low or not stable. B. Injector is plugged or faulty. C. Air in resin tank. D. Floccules in resin tank during up-flow regeneration.	A. Increase water pressure. B. Clean or replace injector. C. Check and find the reason of air intake. D. Clean the floccules in resin tank.
12. Water flows out from drain or brine pipe after regeneration.	A. Foreign material in valve which makes valve can't be closed completely. B. Hard water mixed in valve body. C. Water pressure is too high which result in valve doesn't get the right position. D. Under the Backwash position, pipelines between the outlet and brine line are communicated.	A. Clean foreign material in valve body. B. Change valve core or sealing ring. C. Reduce water pressure or use pressure relief function. D. Install a check Valve, solenoid valve in front of the outlet or install a liquid level controller in the brine tank.

Control Valve Fault


13.Salt water in soften water.	A. Foreign material in injector or injector fails to work. B. Brine valve cannot be shut-off. C. Time of fast rinse too short.	A. Clean and repair injector. B. Repair brine valve and clean it. C. Extend fast rinse time.
14.Unit capacity decreases.	A. Doesn't regenerate properly. B. Fouled resin bed. C. Salt consumption is not proper. D. Softener setting is not proper. E. Raw water quality deterioration. F. Turbine of flow meter is stuck.	A. Regenerate according to the correct operation requirement. B. Increase backwash flow rate and times, clean or change resin. C. Readjust salt consumption. D. According to the test of outlet water, recount and reset. E. Regenerate unit manually, then reset regeneration cycle. F. Disassemble flow meter and clean it or replace a new flow meter.

B. Controller Fault

Problem	Cause	Correction
1. All indictors display on front panel.	A. Wiring of display board with control board fails to work. B. Control board is faulty. C. Transformer is damaged. D. Electrical service is not stable.	A. Check and replace the wiring. B. Replace control board. C. Check and replace transformer. D. Check and adjust electrical service.
2. No display on front panel.	A. Wiring of display board with control board fails to work. B. Display board is damaged. C. Control board is damaged. D. Power supply is interrupted.	A. Check and replace wiring. B. Replace display board. C. Replace control board. D. Check electrical wiring and power supply.
3. E1 Flashes	A. Wiring of locating board with control board is broken. B. Locating board is damaged. C. Mechanical driven failure. D. Control board is damaged. E. Wiring of motor with control board is fault. F. Motor is damaged.	A. Replace wiring. B. Replace locating board. C. Check and repair mechanical part. D. Replace control board. E. Replace wiring. F. Replace motor.
4. E2 Flashes	A. Hall component on locating board damaged. B. Wiring of locating board with controller fails to work. C. Control board is faulty.	A. Replace locating board. B. Replace wiring. C. Replace control board.
5. E3 or E4 Flashes	A. Control board is faulty.	A. Replace control board.

3.8. Assembly & Parts

N74A3 (63610) Valve Body Assembly

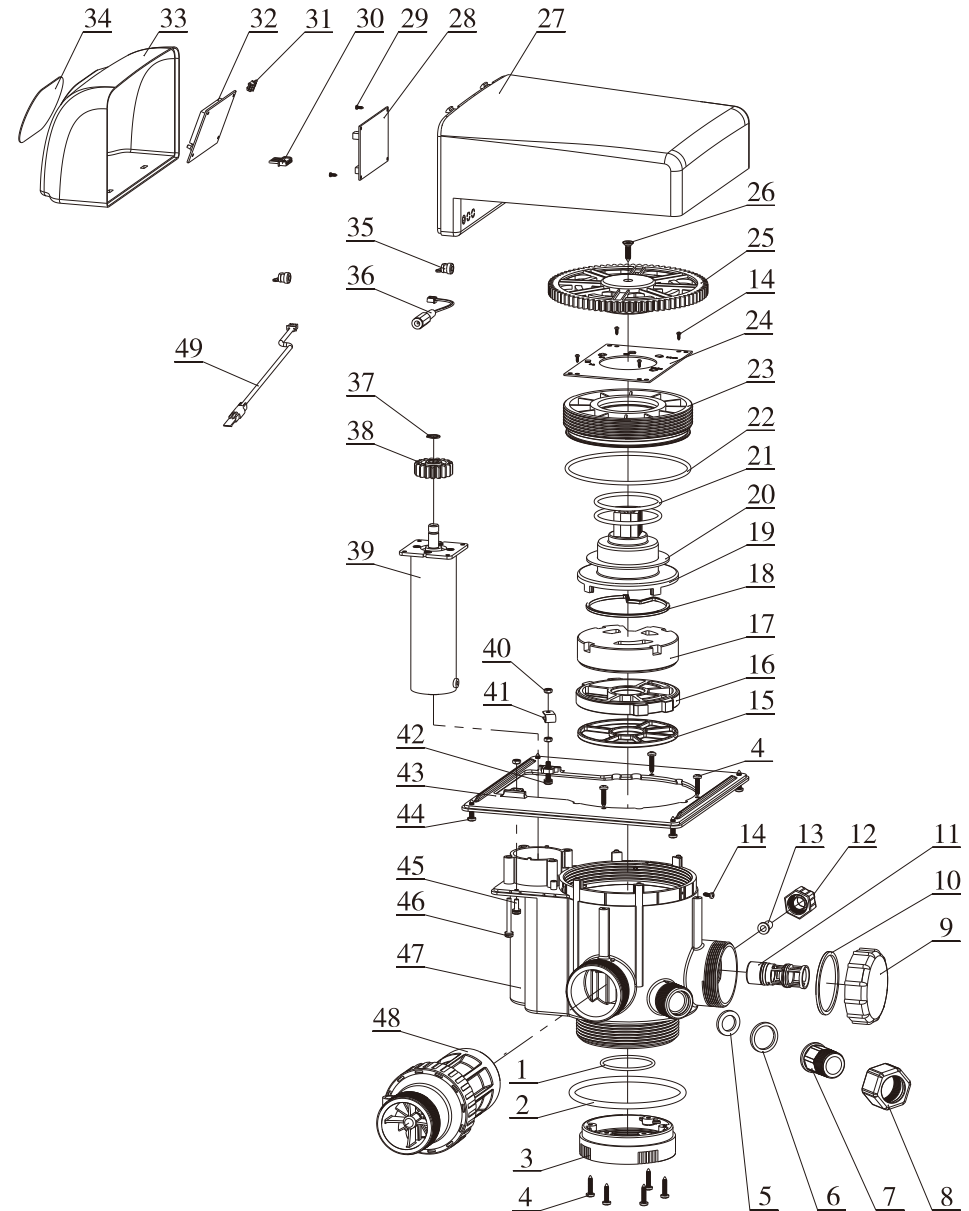


MODEL:N74A1-63510/N74A3-63610/N74B1-63510B/N74B3-63610B

Component and part No. for N74A3/N74A1 (Components for N74A1 without No.48 and No.49)

Item No.	Description	Part Number	Quantity	Item No.	Description	Part Number	Quantity
1	O-ring 50.47×2.62(GB)	8378308	1	26	Screw, Cross ST4.8×19	8909018	1
	O-ring 47.7×3.55(U.S.)	8378124		27	Dust Cover	8005010	1
2	O-ring 104.6×5.7	8378146	1	28	Control Board	6382027	1
3	Connector	8458018	1	29	Screw, Cross ST2.2×6.5	8909004	2
4	Screw, Cross ST 3.9X16	8909003	8	30	Wire for Locating Board	5511002	1
5	Drain Line Flow Control	8468010	1	31	Wire for Display Board	5512001	1
6	Washer	8371053	1	32	Display Board	6381003	1
7	Connector	8458219	1	33	Front Cover	8300017	1
8	Animated Nut	8945043	1	34	Sticker	8865016	1
9	Cover, Injector	8315006	1	35	Wire Clip	8126004	2
10	Seal Ring	8371004	1	36	Wire for Power	5513001	1
11	Injector	5468014	1	37	Pin	8994009	1
12	Hexagonal Nut	8940016	1	38	Small Gear	8241008	1
13	Tube	8457025	1	39	Motor	6158036	1
14	Screw, Cross ST2.9×9.5	8909008	7	40	Hexagonal Nut	8940002	3
15	Seal Ring	8370016	1	41	Wire Clip	8126002	1
16	Fixed Disk	8469010	1	42	Screw, Cross M4×20	8902007	1
17	Moving Disk	8459011	1	43	Connecting Board	8152007	1
18	Moving Seal Ring	8370018	1	44	Screw, Cross ST3.9×16	8909016	4
19	Shaft	8258005	1	45	Screw, Cross M4×12	8902005	1
20	Anti-friction Washer	8216006	1	46	Screw, Cross M4×36.5	8902012	4
21	O-ring 59.92×3.53	8378110	2	47	Valve Body □ ABS+GF10 □	8022052	1
22	O-ring 117.6×3.55	8378133	2		Valve Body □ PPO+GF10)	8022053	1
23	Fitting Nut	8092032	1	48	Flow Meter	5447003	1
24	Locating Board	6380015	1	49	Probe Wire	6386002	1
25	Gear	5241004	1				

MODEL:N74A1-63510/N74A3-63610/N74B1-63510B/N74B3-63610B


5447003 Flow Meter Connector

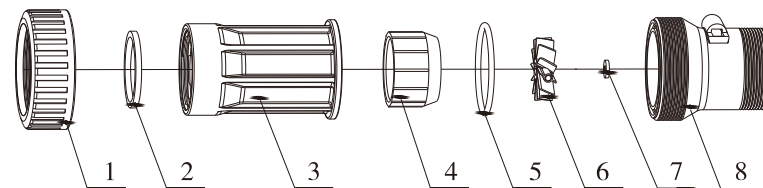

5447003 Flow Meter Connector and Part Number

Item No.	Description	Part Number	Quantity	Item No.	Description	Part Number	Quantity
1	Animated nut	8947004	1	5	O-ring 60×4	8378137	1
2	O-ring	8371008	1	6	Impeller	5436005	1
3	Connector	8458016	1	7	Bushing	8210002	1
4	Toggle	8109006	1	8	Shell	5002002	1


5458002 Side Connector Structure Chart

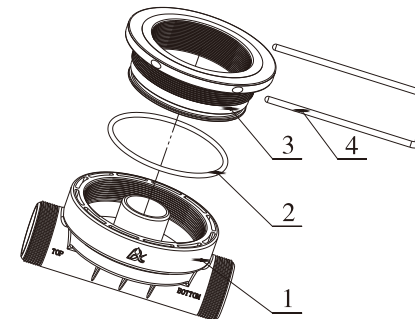

5458002 Side Connector Description and Part Number

Item No.	Description	Part Number	Quantity	Item No.	Description	Part Number	Quantity
1	Adapter	8458037	1	3	Joint	8457017	1
2	O-ring 110×4.5	8378140	1	4	Steel Fork	8271003	1

N74B3 (63510B) Structure Chart:

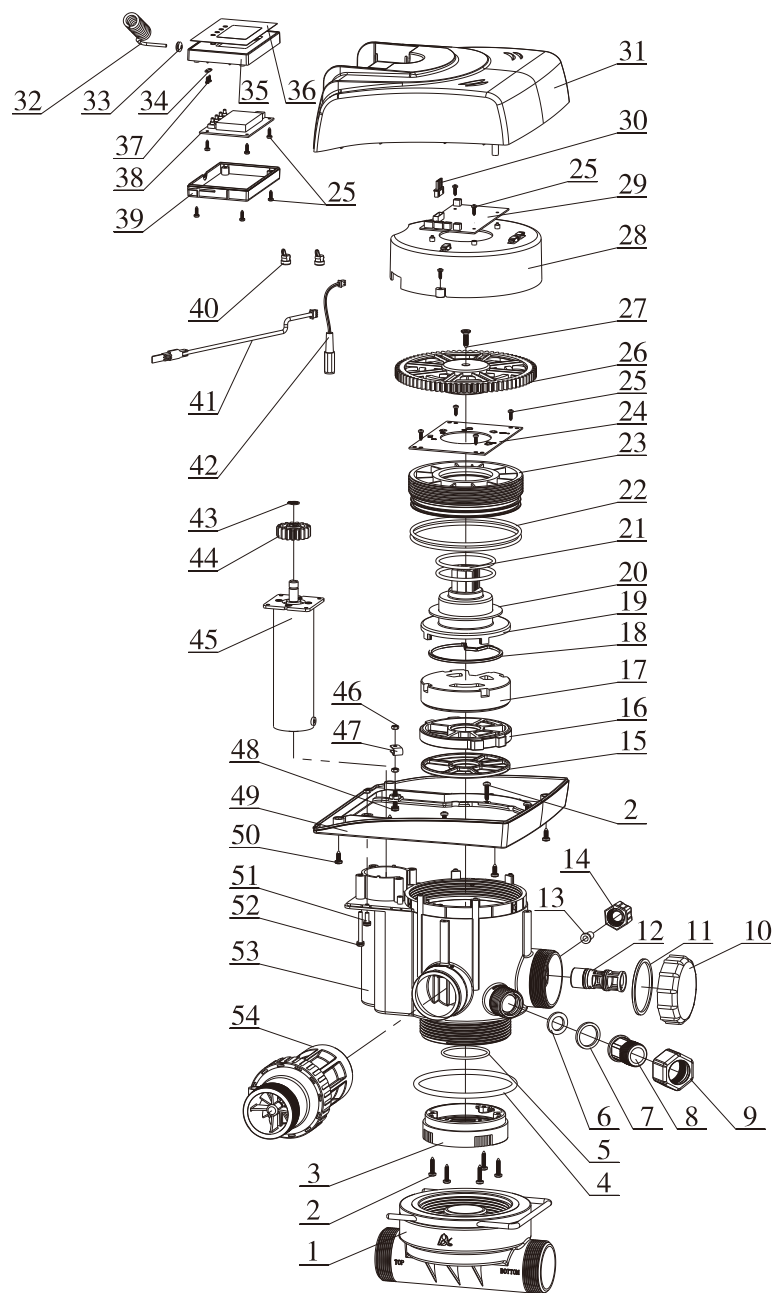

Spare Parts Description and Part No. for N74B3/N74B1 (without No.41 and No.54 for N74B1)

Item No.	Description	Part Number	Quantity	序号	零部件名称	零部编号	数量
1	Side-mounted Connector	5458002	1	29	Control Board	6382027	1
2	Screw, Cross ST3.9×19	8909003	12	30	Wire for Locating Board	5511002	1
3	Connector	8458018	1	31	Dust Cover	8005023	1
4	O-ring 104.6×5.7	8378146	1	32	Three Core Spring Line	8517001	1
5	O-ring 50.47×2.62(GB)	8378308	1	33	Bushing	8126006	1
	O-ring 47.7×3.55(U.S.)	8378124		34	Wire Clip	8126001	1
6	Drain Line Flow Control	8468010	1	35	Front Cover	8300025	1
7	Washer	8371053	1	36	Sticker	8865023	1
8	Connector	8458219	1	37	Screw, Cross ST2.2×6.5	8909004	6
9	Animated Nut	8945043	1	38	Display Board	6381003	1
10	Cover, Injector	8315006	1	39	Cover	8315016	1
11	O-ring	8371004	1	40	Wire Clip	8126004	2
12	Injector	5468013	1	41	Probe Wire	6386002	1
13	Tube	8457025	1	42	Wire for Power	5513001	1
14	Hexagonal Nut	8940016	1	43	Pin	8994009	1
15	Seal Ring	8370016	1	44	Small Gear	8241008	1
16	Fixed Disk	8469010	1	45	Motor	6158036	1
17	Moving Disk	8459011	1	46	Hexagonal Nut	8940002	3
18	Moving Seal Ring	8370018	1	47	Wire Clip	8126002	1
19	Shaft	8258005	1	48	Screw, Cross M4×20	8902007	1
20	Anti-friction Washer	8216006	1	49	Connecting Board	8152012	1
21	O-ring 59.95×3.53	8378110	2	50	Screw, Cross ST3.9×16	8909016	4
22	O-ring 117.6×3.55	8378133	2	51	Screw, Cross M4×12	8902005	1
23	Fitting Nut	8092032	1	52	Screw, Cross M4×36.5	8902012	4
24	Locating Board	6380015	1	53	Valve Body (ABS+GF10)	8022052	1
25	Screw, Cross ST2.9×9.5	8909008	17		Valve Body (PPO+GF10)	8022053	
26	Gear	5241004	1	54	Flow Meter	5447003	1
27	Screw, Cross ST4.8×19	8909018	1				
28	Fixed Base	8109004	1				


## 4. Warranty Card

Dear client:

This warranty card is the guarantee proof of multi-functional flow control valve. It is kept by client self. You could get the after-sales services from the supplier which is appointed by Runxin manufacturer. Please keep it properly. It couldn't be retrieved if lost.

It couldn't be repaired free of charge under the below conditions:

1. Guarantee period expired. (One year)
2. Damage resulting from using, maintenance, and keeping that are not in accordance with the instruction.
3. Damage resulting from repairing not by the appointed maintenance personnel.
4. Content in guarantee proof is unconfirmed with the label on the real good or be altered.
5. Damage resulting from force majeure.

Product Name	 Multi-functional Flow Control Valve for Water Treatment Systems			
Model		Code of Valve Body		
Purchase Company Name		Tel/Cel.		
Problem				
Solution				
Date of Repairing		Date of Accomplishment		Maintenance Man Signature

When product needs warranty service, please fill in the below content and send this card together with the product to the appointed suppliers or Runxin company.

End-user Company Name		Tel/Cel.		
Purchase Company Name		Tel/Cel.		
Model	Code of Valve Body			
Tank Size $\phi$ ×	Resin Volume	L	Raw Water Hardness	mmol/L
Water Source: Ground-water <input type="checkbox"/> Tap Water <input type="checkbox"/>	Water Treatment Capacity	m <sup>3</sup>	Backwash Time	min
Brine & Slow Rinse Time	min	Brine Refill Time	min	Fast Rinse Time
Problem Description				